


BEFORE CONCRETE POUR

TIMBER FORMWORK TO CREATE REBATE.  
ENSURE TIMBER IS BRACED WELL

SILL REMAINS OPEN. FINISH  
CONCRETE ON SILL FLUSH WITH  
BOTTOM OF OPENING

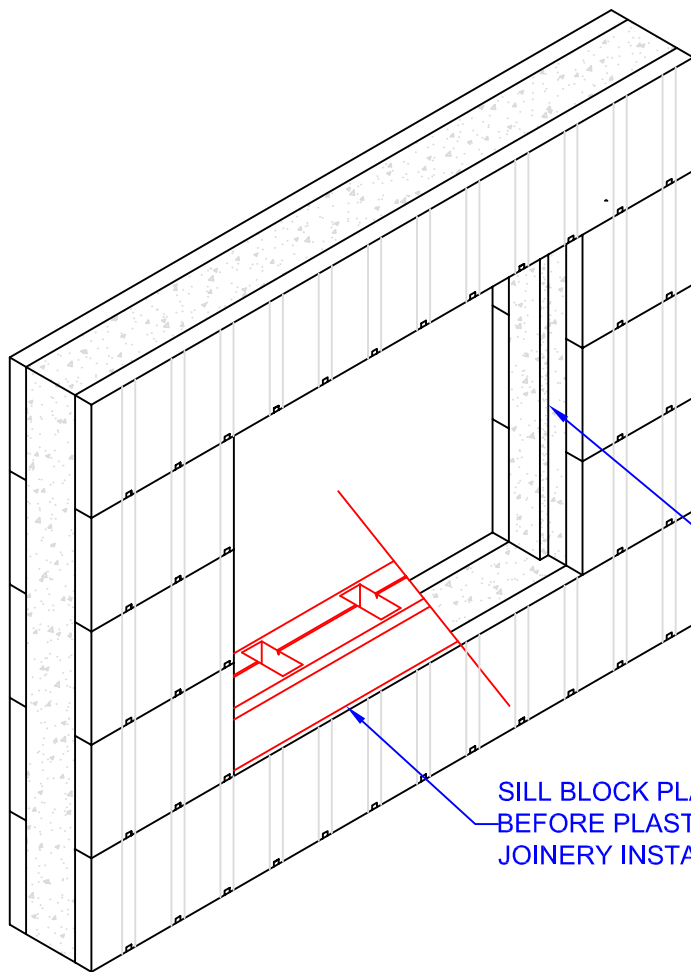

AFTER CONCRETE POUR

REBATE FORMED IN CONCRETE ON  
JAMB AND HEAD

SILL BLOCK PLACED IMMEDIATELY  
BEFORE PLASTERING AND/OR  
JOINERY INSTALLATION



Title:

**CONSTRUCTING WINDOW/DOORS  
FORMING REBATE**

Cad ref N°: **CWD-FR**

These details are intended to assist the user in the construction of Ambionse insulated concrete formwork structures

Drawn:  
**C COTTLE**

Scale:  
**1:20 @ A4**

Date:  
**MAY 2005**