



It's Wonderful!

Wunderfloor has been designed to insulate wooden floors of new and existing homes and provides more insulation than required by the Building Code for new homes. Each Wunderfloor panel features four individual pockets to trap air and provide a consistent level of insulation.

Wunderfloor creates a drier, warmer and healthier living environment

Wunderfloor provides R1.5 or better insulation and prevents drafts rising through the gaps in the floor boards

Wunderfloor makes the floor quieter and reduces the echo

Wunderfloor is easy to install and can be secured with the supplied fixing brackets


Wunderfloor is durable, and will not rot or shrink

Wunderfloor is fire retardant and is non-irritant

Wunderfloor panels are 60mm thick and are available in packs of 10 in the following sizes:


Panel 420 420mm wide by 1200mm long
(to suit joist spacing up to 450mm)

Panel 560 560mm wide by 1200mm long
(to suit joist spacing up to 600mm)

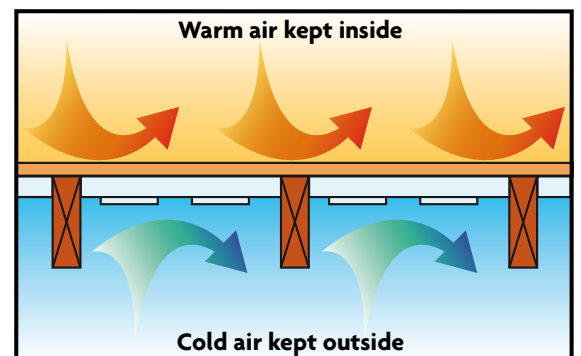

Easy installation tips

1. If required, trim the Wunderfloor panels to suit the space between the joists– the fit should be snug to hold them in place. Use the concertina grooves as a guide for a straight cut. The Wunderfloor panels can be cut with a serrated bread knife or long-bladed sharp craft knife.
2. Push the Wunderfloor panels into the space between the joists with the correct side against the underside of the floor (this is labelled on each panel). Make sure that the Wunderfloor panels are pushed hard up against the flooring.
3. Cut the Wunderfloor panels to fit snugly around any pipes.
4. Keep all electrical wires away from the Wunderfloor panels, but if unavoidable, separate the wiring from the Wunderfloor panels with self adhesive tape or similar. Direct prolonged contact between the Wunderfloor panels and electrical wiring is not allowed.
5. Wunderfloor panels are supplied with fixing brackets. These are used to hold the Wunderfloor panels in place in windy conditions or if the joist spacing is not consistent. If required, staple the bracket to the joist tight up against the underside of the Wunderfloor panels. Use two brackets per Wunderfloor panel, either at the middle of the panel or overlapping the joints between two panels.
6. Be aware of electrical cables. **DO NOT STAPLE THE BRACKETS WITHIN 100mm OF ELECTRICAL WIRES/CABLES.**
7. Continue placing the Wunderfloor panels end to end in each joist space, until the entire floor area is covered.
8. Smaller areas can be covered with part-panels made from off cuts. Other off-cuts can be used as insulation in other areas of the house. You could even break the off-cuts into small pieces and add to your pot plant soil to aid drainage.

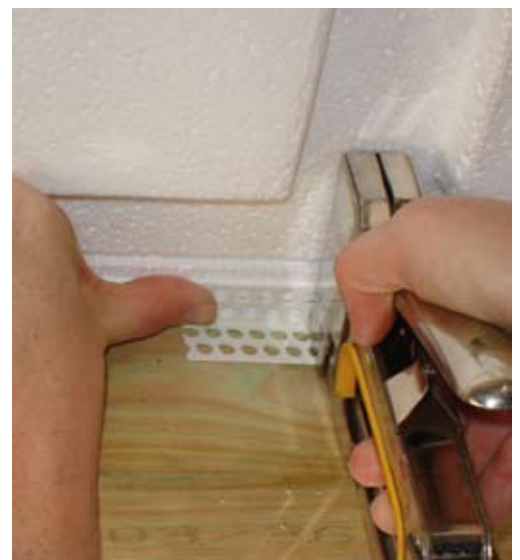

Available From